




Acer Iconia B1-710 Screen Replacement

Learn to take apart the acer Iconia B1-710 to replace the screen

Written By: Ryan Weber

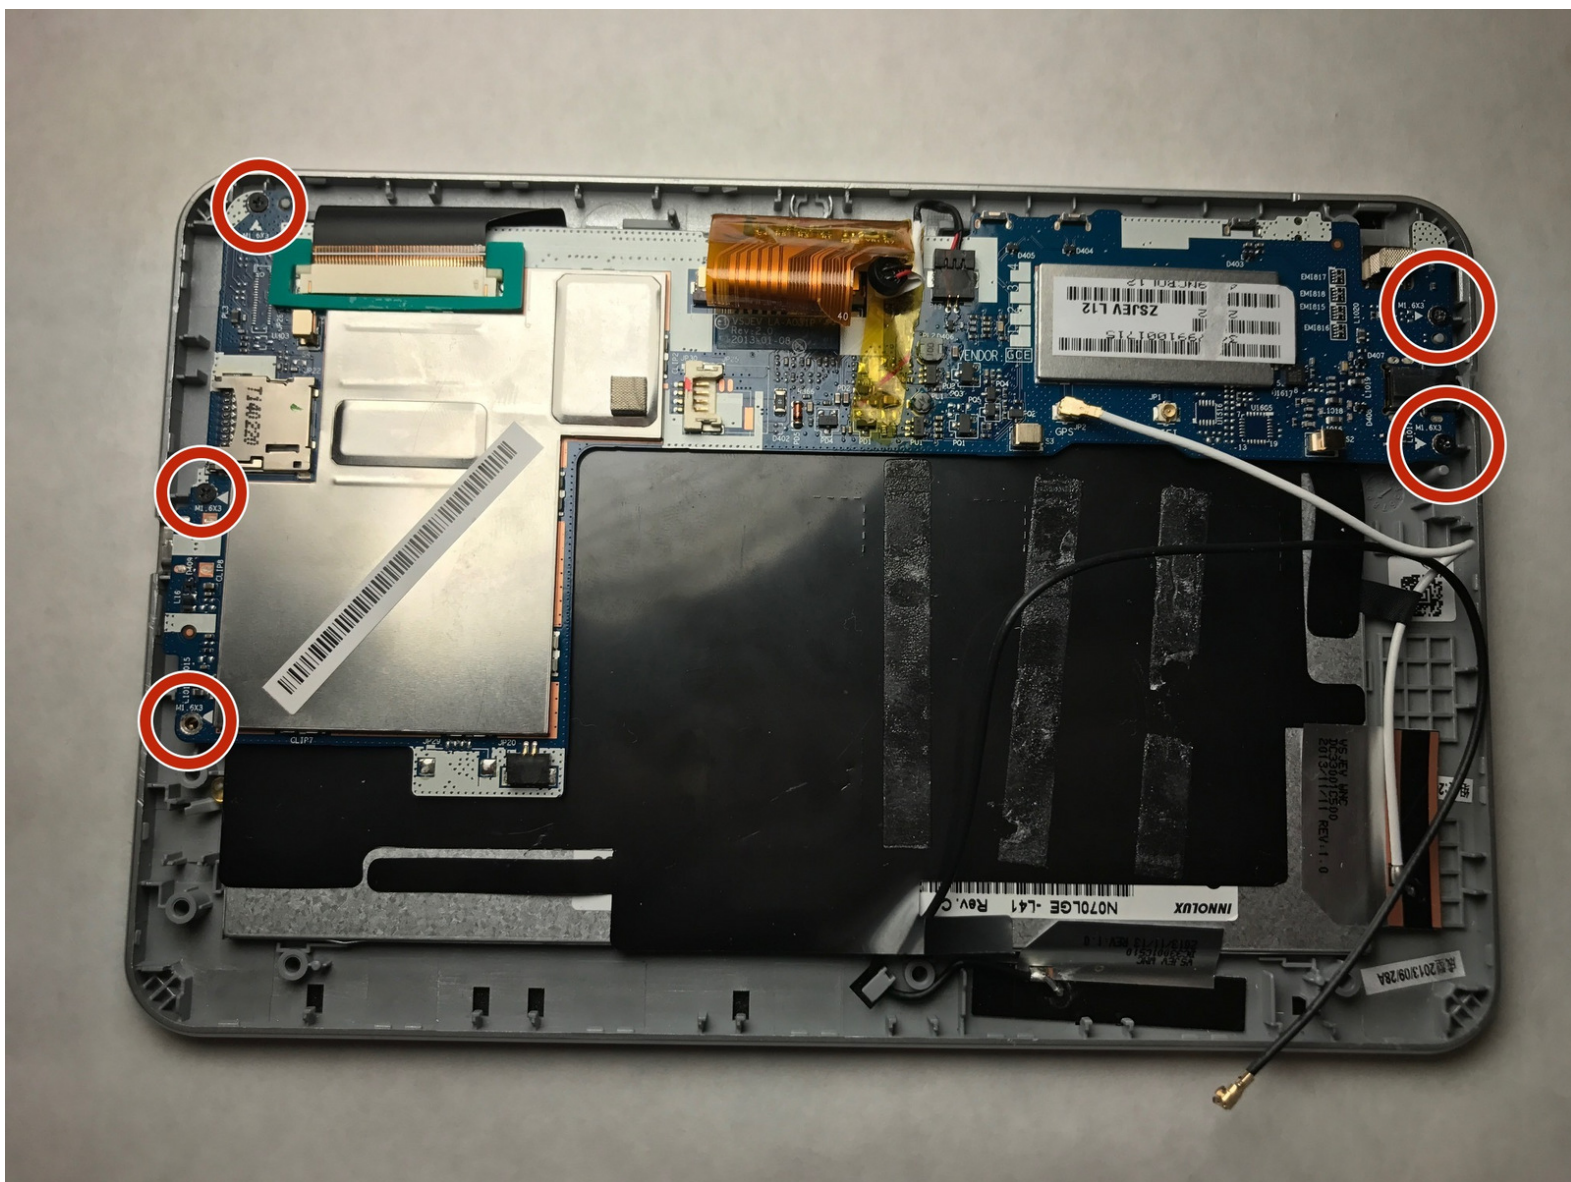

INTRODUCTION


Replace the screen on your Acer Iconia B1-710.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-


Step 1 — Battery

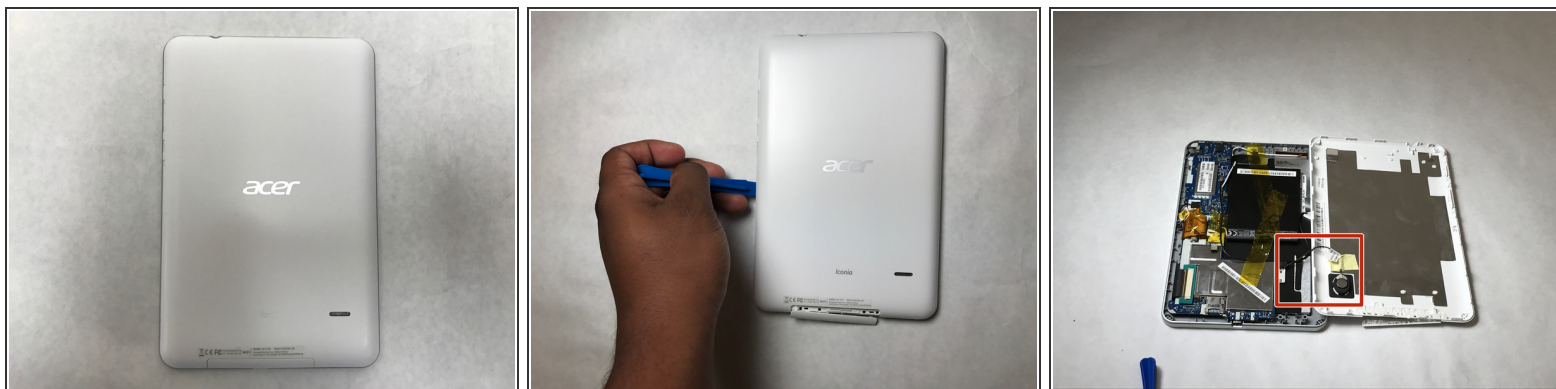

- Open back cover by prying casing off.

⚠ Careful to not pull pieces apart aggressively. There is a wire that could break

Step 2

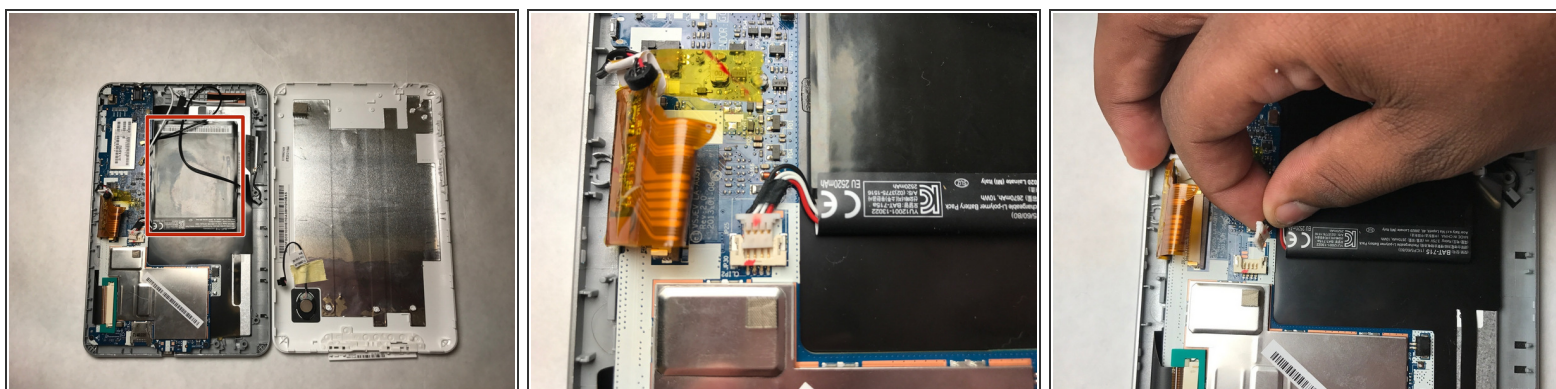

- Locate the battery
- Unplug the battery from the motherboard


Step 3



- Take the battery out

i The battery is lightly glued in so there may be some difficulty

Step 4 — Screen

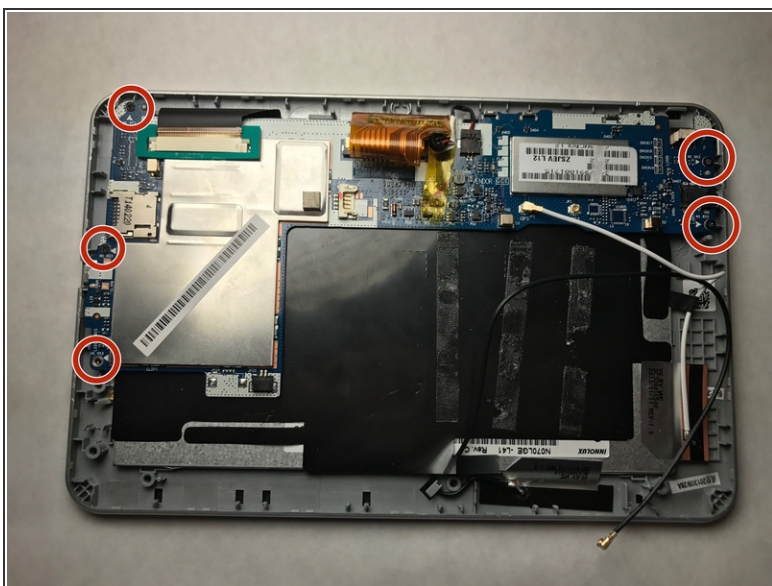

- Unscrew all 5 3mm #000 Phillips screws

i Keep the screws in a safe place





Step 5






- Unplug the LCD ribbon

Step 6

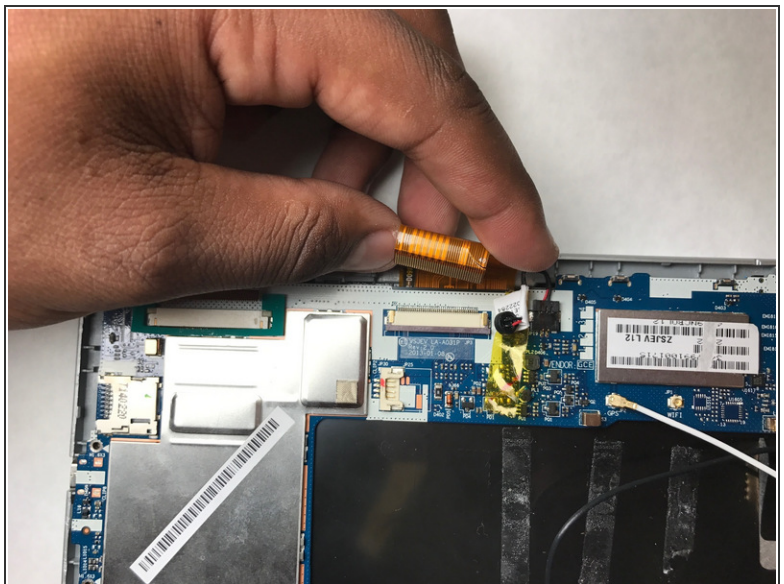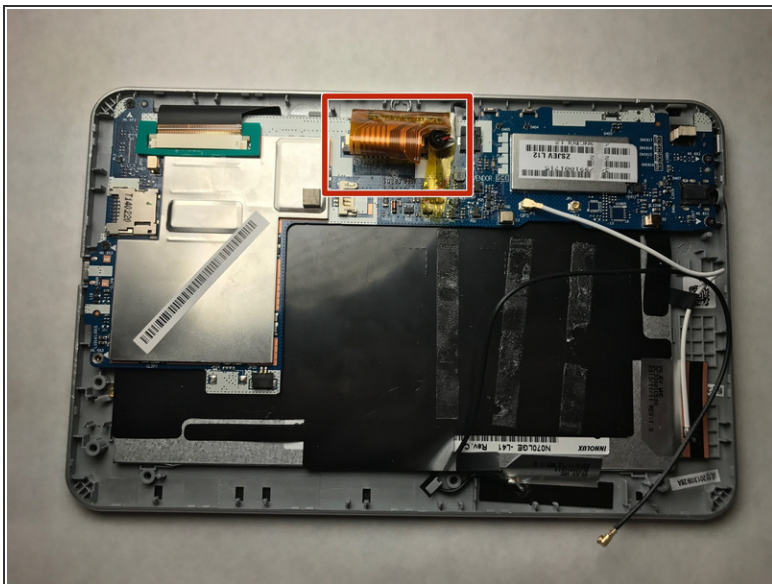


- Unplug the orange ribbon

Step 7

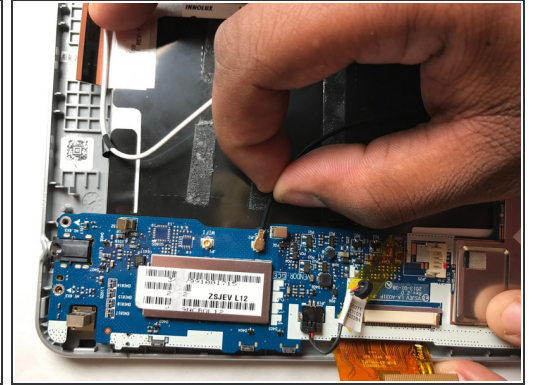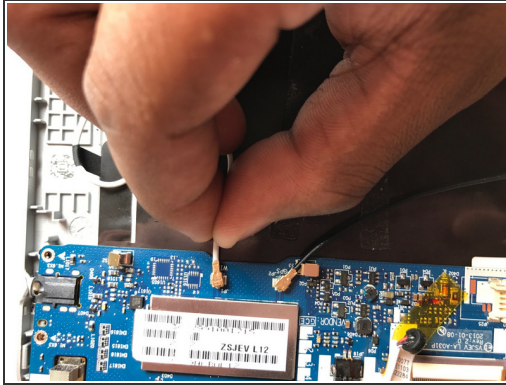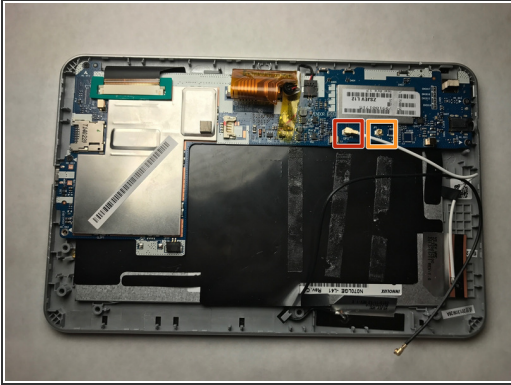

- Unplug the wire wire from the motherboard
- Unplug the black wire from the motherboard

Step 8

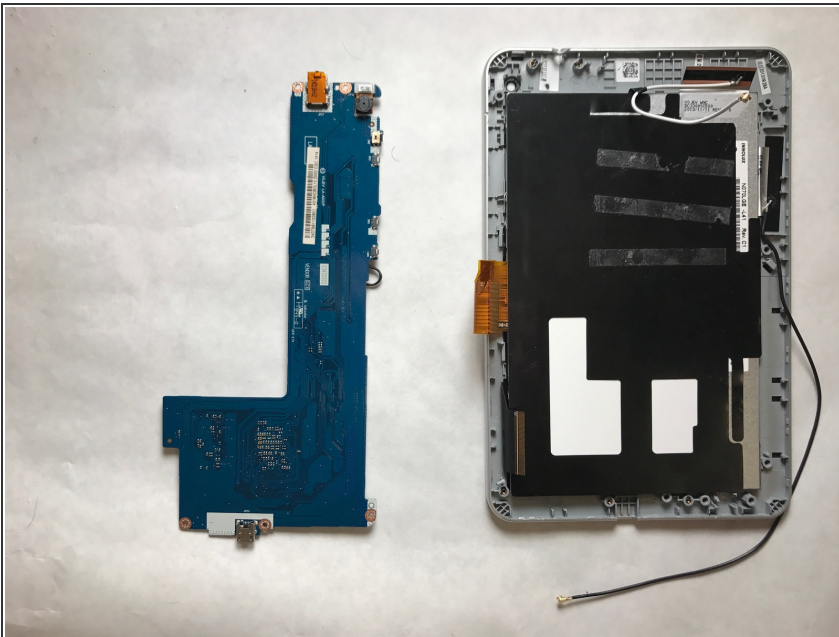


- Pull the mother board off of your tablet

Step 9



- Use a blow dryer to melt the glue holding the LCD display in place
- ⓘ Patience is key. It will take a few minutes to melt the glue

Step 10

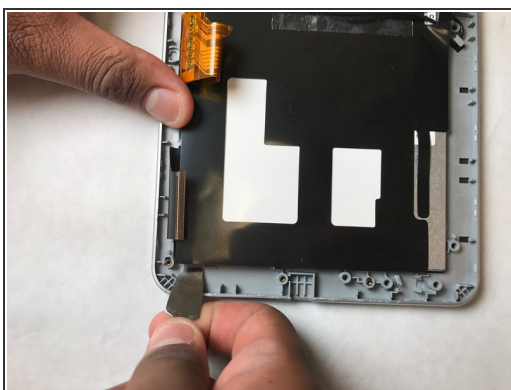


- Peel the LCD display

⚠ This piece is fragile and needs to be done with care

⚠ Parts may be hot


Step 11

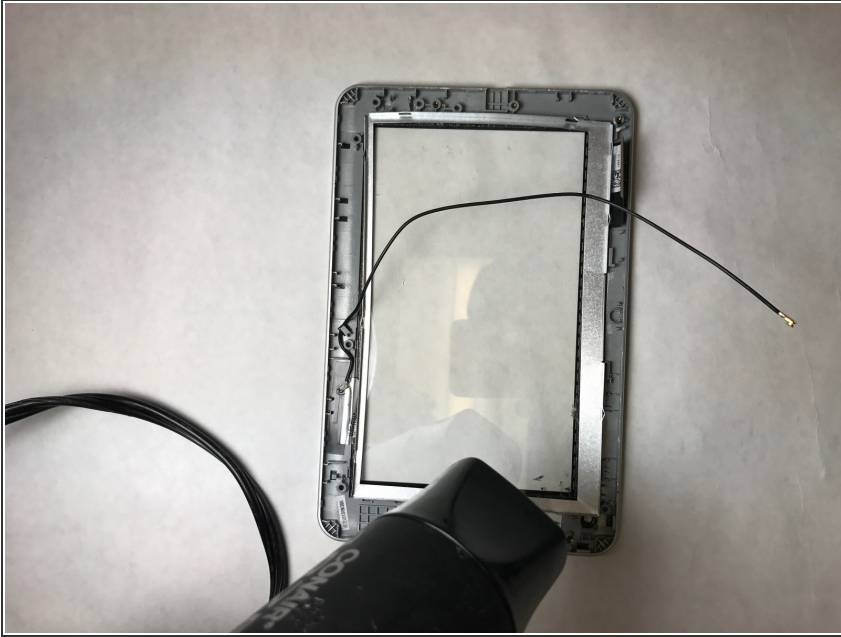

- Use a blow dryer to melt the glue from the thin metal frame

⚠ This piece is metal and will become hot during this process

Step 12

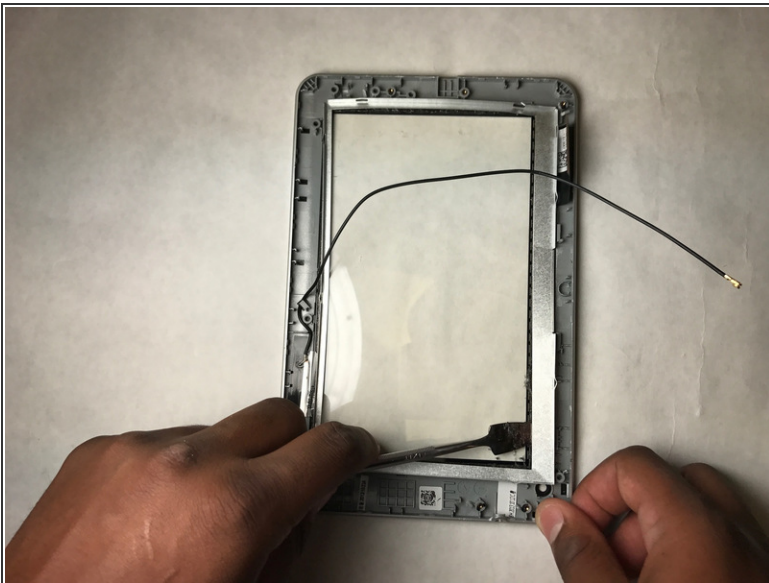

- Peel off the thin metal frame

⚠ Careful to not bend the frame, it is very thin

Step 13



- Use a blow dryer to melt the glue between the metal frame and the screen

⚠ The frame will get hot

Step 14



- Peel the frame from the screen

⚠ Careful the screen can sustain further damage.

To reassemble your device, follow these instructions in reverse order.

